
 



2

Fix the Waterproof Junction Box on the IP camera

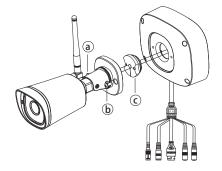



- 1. Loosen the screws to open the Waterproof Junction Box.
- 2. Put the silica gel plug at the junction of camera and wires.
- 3. Thread wires through Waterproof Junction Box.
- 4. Tighten the two screws to fix camera on the Waterproof junction box.

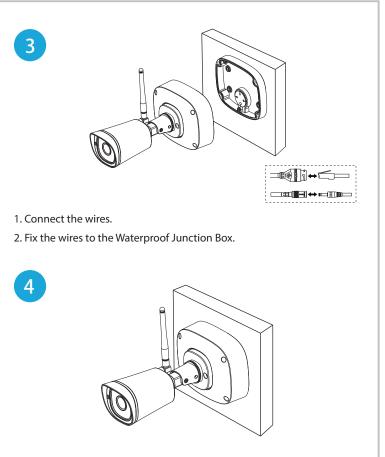

Tighten the screws to fix the Waterproof Junction Box and IP camera on the wall.